


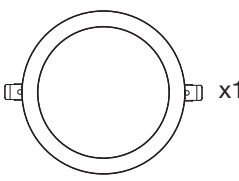



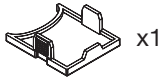
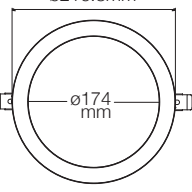

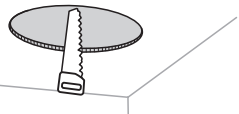
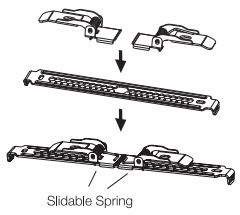
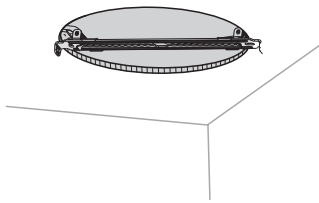
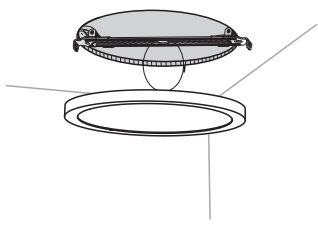
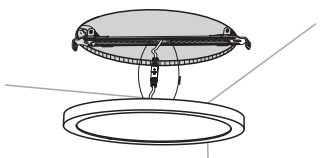

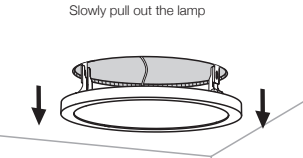
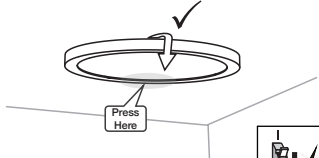
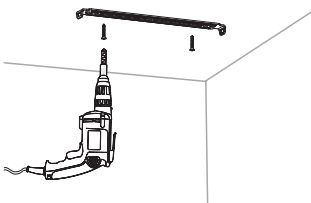
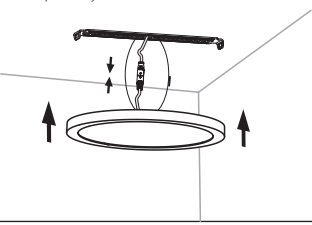
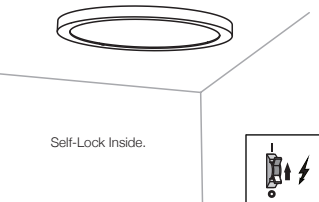
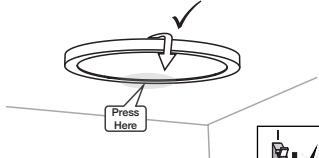

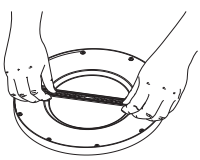










<b>Content:</b>  x1  x1  x1  x1  x3  x2  x1  x1										<b>Dimension:</b>  $\phi 216.8\text{mm}$ $\phi 174\text{mm}$ $\phi 15\text{mm}$  $\phi 55-175\text{mm}$																																																															
<table border="1"> <thead> <tr> <th>EAN</th> <th>W</th> <th>lm</th> <th>K</th> <th>CRI</th> <th>Ta (°C)</th> <th>V</th> <th>Hz</th> <th>Dim</th> <th>Beam Angle</th> <th>g</th> </tr> </thead> <tbody> <tr> <td>8719157040921</td> <td>18</td> <td>1530</td> <td>4000</td> <td>80</td> <td>-20~+40</td> <td>220-240</td> <td>50/60</td> <td>Dim</td> <td>110°</td> <td>434.5</td> </tr> <tr> <td></td> <td>18</td> <td>1400</td> <td>3000</td> <td>80</td> <td>-20~+40</td> <td>220-240</td> <td>50/60</td> <td>Dim</td> <td>110°</td> <td>434.5</td> </tr> <tr> <td></td> <td>18</td> <td>1400</td> <td>6500</td> <td>80</td> <td>-20~+40</td> <td>220-240</td> <td>50/60</td> <td>Dim</td> <td>110°</td> <td>434.5</td> </tr> </tbody> </table>										EAN	W	lm	K	CRI	Ta (°C)	V	Hz	Dim	Beam Angle	g	8719157040921	18	1530	4000	80	-20~+40	220-240	50/60	Dim	110°	434.5		18	1400	3000	80	-20~+40	220-240	50/60	Dim	110°	434.5		18	1400	6500	80	-20~+40	220-240	50/60	Dim	110°	434.5	<table border="1"> <tr> <td>Inrush current</td> <td>18W</td> </tr> <tr> <td>Driver</td> <td></td> </tr> <tr> <td>Inrush current I<sub>peak</sub>(A)</td> <td>6.1A</td> </tr> <tr> <td>Inrush current T<sub>width</sub>(μs)</td> <td>0.722μs</td> </tr> <tr> <td>Input voltage 230V</td> <td>Input voltage 230V, measured at 50% I<sub>peak</sub></td> </tr> </table>										Inrush current	18W	Driver		Inrush current I <sub>peak</sub> (A)	6.1A	Inrush current T <sub>width</sub> (μs)	0.722μs	Input voltage 230V	Input voltage 230V, measured at 50% I <sub>peak</sub>
EAN	W	lm	K	CRI	Ta (°C)	V	Hz	Dim	Beam Angle	g																																																															
8719157040921	18	1530	4000	80	-20~+40	220-240	50/60	Dim	110°	434.5																																																															
	18	1400	3000	80	-20~+40	220-240	50/60	Dim	110°	434.5																																																															
	18	1400	6500	80	-20~+40	220-240	50/60	Dim	110°	434.5																																																															
Inrush current	18W																																																																								
Driver																																																																									
Inrush current I <sub>peak</sub> (A)	6.1A																																																																								
Inrush current T <sub>width</sub> (μs)	0.722μs																																																																								
Input voltage 230V	Input voltage 230V, measured at 50% I <sub>peak</sub>																																																																								
<b>A With Mounting Hole Ready</b>										<b>A How to Uninstall?</b>																																																															
<b>a1</b> Cut the hole according to desired size and shape.  <small>* Refer to the instructions to find the cut-size</small>					<b>a2</b> Put the slidable springs on the bracket and slide the springs to adjust its position according to size of hole.  <small>Slidable Spring</small>					<b>a3</b> Insert the springs with bracket into the ceiling. 					<b>a4</b> Connect the lamp with the bracket by the safe wire. 																																																										
<b>a5</b> Connect the lamp to power supply, push the lamp directly into the bracket. 					<b>a6</b> Installation is done  <small>* Self-Lock inside</small>					 <small>Slowly pull out the lamp</small>					<input checked="" type="checkbox"/> Press one side of the lamp frame (perpendicular to bracket), then take out the lamp from the opposite side.  <small>Press Here</small>																																																										
<b>B Without Mounting Hole</b>										<b>B How to Uninstall?</b>																																																															
<b>b1</b> Fix the bracket on the ceiling 					<b>b2</b> Connect the lamp with the bracket by the safe wire, then connect the power supply, push the lamp directly into the bracket. 					<b>b3</b> Clicking sound indicates the installation is done.  <small>Self-Lock Inside.</small>					<input checked="" type="checkbox"/> Press one side of the lamp frame (perpendicular to bracket), then take out the lamp from the opposite side.  <small>Press Here</small>																																																										
 <b>Correct Method to Detach Bracket</b> <input checked="" type="checkbox"/> Take out from both ends simultaneously. 					     <small>*This product is equipped with a LED light source that can only be replaced by authorised professionals. *This product have a control gear that can only be replaced by authorised professional personnel.</small>					   <small>Clean only with a soft cloth</small>																																																															

**EN** The luminaire shall be installed and maintained by a qualified electrician, in accordance with the national regulations in each country. The luminaire contains no replaceable parts. In case of the luminaire is damaged, it shall be exclusively replaced by the manufacturer or authorized dealer. Keep the operating manual for later use. The manufacturer is not responsible for the incorrect use and assembly of this product.

**NL** De armatuur dient te worden geïnstalleerd en onderhouden door een erkend installateur, in overeenstemming met de nationale regelgeving in het betreffende land. De armatuur bevat geen vervangbare onderdelen. Indien de armatuur is beschadigd dient deze enkel te worden vervangen door de fabrikant of door een erkende dealer. Bewaar de handleiding voor later gebruik. De fabrikant is niet verantwoordelijk voor onjuist gebruik en/of installatie van dit product.

**DE** Die Leuchte muss von einem qualifizierten Elektriker gemäß den nationalen Vorschriften in jedem Land installiert und gewartet werden. Die Leuchte enthält keine austauschbaren Teile. Falls die Leuchte beschädigt ist, wird sie ausschließlich durch den Hersteller oder den autorisierten Händler ersetzt. Bewahren Sie die Bedienungsanleitung für spätere Verwendung auf. Der Hersteller ist nicht verantwortlich für die unsachgemäße Verwendung und Montage dieses Produktes.

**FR** Le luminaire doit être installé et entretenu par un électricien qualifié, conformément à la réglementation nationale de chaque pays. Le luminaire ne contient pas de pièces remplaçables. Dans le cas où le luminaire est endommagé, il doit être remplacé exclusivement par le fabricant ou le revendeur agréé. Conservez le mode d'emploi pour une utilisation ultérieure. Le fabricant n'est pas responsable de l'utilisation et du montage incorrects de ce produit.

**IT** L'apparecchio deve essere installato e mantenuto da un elettricista qualificato seguendo le normative nazionali di riferimento. L'apparecchio non contiene parti sostituibili. In caso di rottura sarà sostituito esclusivamente dal produttore o da un rivenditore autorizzato. Conservate il manuale di installazione per eventuali utilizzi successivi. Il produttore non è responsabile per l'utilizzo ed il montaggio non corretto di tale apparecchio.

**ES** La luminaria debe de ser instalada y mantenida por un electricista cualificado, siguiendo las regulaciones nacionales de cada país. La luminaria contiene partes no reemplazables. En el caso de que la luminaria sea dañada, deberá ser reemplazada exclusivamente por el fabricante o distribuidor autorizado. Guarde el manual para usos posteriores. El fabricante no es responsable por el uso e instalación incorrecta de este producto.